

CIMR 500 WARRANTY FORM

Customer Information:

Name _____

Address _____

Phone # _____

Distributor Information:

Name _____

Phone _____

UNIT: CIMR 500

Serial Number _____

Date of Purchase _____

PLEASE COPY AND FILL OUT ALL INFO
RETURN IMMEDIATELY
MAIL, FAX OR EMAIL TO:

Hi-Tech Air Purification Systems
dba CIMR Technology
105 Magnolia Lane
Silsbee, TX 77656

Fax (866) 821-5569
customer.service@hitechllc.com



CIMR 500 Owner's Manual

Continuous Infectious Microbial Reduction

CIMR™ Infection Control Technology makes New Infection Control Strategies possible for medical facilities, businesses of all sizes, educational institutions, government, mass transportation, and the hospitality industry.

It has been demonstrated to be effective against every virus, bacteria, mold, and other fungus against which it has been applied to date, including the H5N8 virus, MRSA (Methycillin Resistant Staphylococcus Aureus), nonresistant Staphylococcus Aureus, E-Coli, Listeria Monocytogenes, Stachybotrus Chartarum (Black Mold), Streptococcus, Pseudomonas, and Bacillus Subtillus.

Congratulations

You have purchased one of the most effective, technologically advanced air purifiers available. Your new CIMR 500 is designed to provide years of trouble-free, low maintenance operation. Be sure to read and follow all service procedures outlined in this owner's manual, and to use only genuine CIMR replacement parts available from your Distributor.

If you have any questions concerning this product, please contact your CIMR Representative.



Warning! – UV Lamp operation. Do not operate unless the unit is completely and correct assembled. Failure to comply may result in serious eye damage.

Caution! – For outlet installation only! Never connect to an extension cord or other power source. Improper installation could result in electric shock or short.



Caution: To reduce the risk of electric shock, this equipment has a grounding type plug that has a third (grounding) pin. This plug will only fit into a grounding type power outlet. If the plug does not fit into the outlet, contact qualified personnel to install the proper outlet. Do not alter the plug in any way.



Location for Protective Earth Line.

Your CIMR Technology Representative :

Name: _____

Phone: _____

Warranty Information

This product is of solid state construction and is under warranty by:
Hi-Tech Air Purification Systems
www.cimrtech.com
Phone 866-231-3687

To the original purchaser, to be free from defect in materials and workmanship for a limited time.

Terms: Hi-Tech technology products with valid serial numbers are under warranty by Hi-Tech Systems, 105 Magnolia Lane, Silsbee, TX 77656, to the original purchaser only, to be free from defect in materials and workmanship for three (3) years from date of purchase, (excluding CIMR Cell which is under warranty for one (1) year from date of purchase. If a valid serial number is missing from a product, the warranty will be voided. To confirm warranty coverage prior to purchasing a product, contact the Company at 866.231.3687 with the serial number located on the back of the unit.

Hi-Tech products are authorized for sale through Independent Dealers only. Warranties are voided if a product is purchased through unauthorized channels. The Company will not extend warranty coverage on any product sold in a manner that violates our Internet Advertising Guidelines. This includes websites that are not authorized to use our trademarked names, images, and logos, as well as Internet auction sites. The only approved Internet presence for Hi-Tech products is the Company's corporate web address, www.cimrtech.com. The Company's liability under this Warranty shall be limited to repair, or at our option, replacement without charge, except for transportation. All transportation charges on parts or units submitted under this Warranty shall be borne by purchaser. Unless this Warranty is expressly renewed or extended by the Company, any repaired or replaced part of the unit shall be under warranty to the original purchaser only, for the length of the unexpired portion of the original warranty.

The Company makes no warranties, express or implied, with respect to our Products, except such written warranty or warranties as may be set forth herein. SUCH WRITTEN WARRANTY IS EXCLUSIVE AND, TO THE EXTENT PERMITTED BY LAW, the COMPANY DISCLAIMS ALL OTHER WARRANTIES, INCLUDING BUT NOT LIMITED TO A WARRANTY OF MERCHANTABILITY OR FITNESS OF PURPOSE. NO CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES OR OTHER INDIRECT OR SPECIAL DAMAGE OR LOSS OF GOODWILL, LOSS OF BUSINESS OPPORTUNITY, LOSS OR USE OF PLANT OR EQUIPMENT, OR LOSS OF EXECUTIVE AND EMPLOYEE TIME, WILL BE RECOVERABLE AND ARE SPECIFICALLY DISCLAIMED. THIS LIMITATION OF LIABILITY AND REMEDY REPLACES ANY AND ALL THEORIES OF ACTION, CAUSES OF ACTION, OR THEORIES OF DAMAGE WHICH MAY BE HAD OR BROUGHT, INCLUDING BUT NOT LIMITED TO ACTIONS BASED ON STATUTE, CONTRACT, BREACH OF WARRANTY, NEGLIGENCE, STRICT LIABILITY OR OTHER TORT THEORY. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This Warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. If your unit is defective, please contact Hi-Tech @ 105 Magnolia Lane, Silsbee, TX 77656, 866.231.3687 or www.cimrtech.com. Please copy mail, fax 866.821.5569, or email your Warranty Card Information to Hi-Tech within 10 days of purchase for activation of warranty.

FCC Declaration of Conformity

Model: CIMR 500


This device complies with Part 18 of the FCC Rules.

Installing Screws for added security



Caution! - Disconnect power at the breaker or fuse panel before working on unit. Unit switch should be in

1. Remove the cover of the CIMR 500 by removing the 2 side screws. See illustration on page 8.
2. Pull cover off unit. Insert the unit into the plug outlet .
3. Fasten to wall with fasteners using the provided holes. The holes provided are positioned to catch the stud either on the right or left of outlet. (Due to the varieties in wall materials, fasteners are not included.)

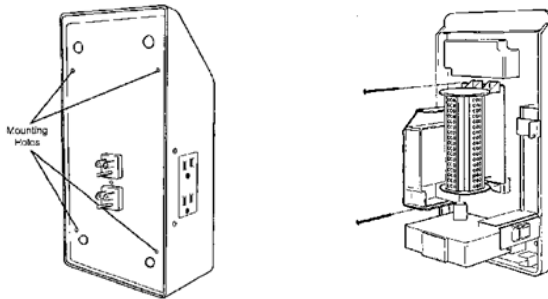

4. Return the cover to the unit and put the side screws (or optional torx security screws) into place. See illustration on page 9.

Part 18 of the FCC Rules in regards to radio frequency energy: There is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Table of Contents



Unit Inspection	3
Unit Features	4
Specifications	5
Maintenance	6
Installation	6
Removing/Reinstalling Cell	8
Installing Security Screws	10
Warranty Information	11
Warranty Form	12

Unit Inspection:


- Remove unit from shipping carton.
- Remove all protective materials.
- Check for loose or broken parts from shipping damage.
- Read owner's manual thoroughly prior to installation.
- Determine placement location for the unit. Follow installation instructions in this owner's manual.

Unit Features:

- Secure Installation
- No Duct Work Required
- Low Maintenance
- Complete User Control
- Plugs into 120 volt outlet
- Retain Use of Outlet
- Compact
- No Chemicals
- Low Power Use
- No Residual Contamination
- Washable Filter

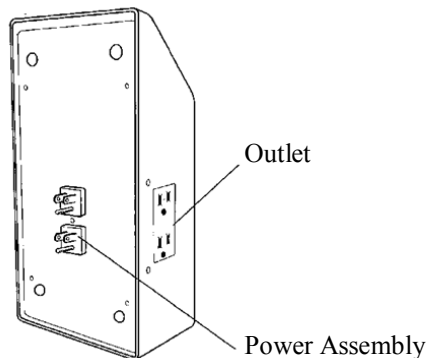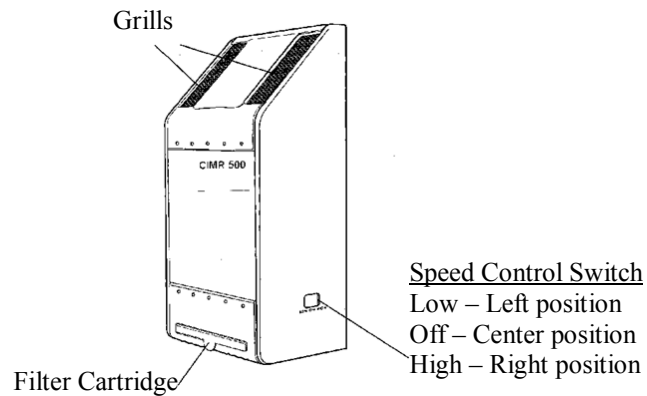


3. Remove CIMR cell by pulling cell out from under the tab indicator. Tilt outward and pull. Remove power supply from the cell plug.

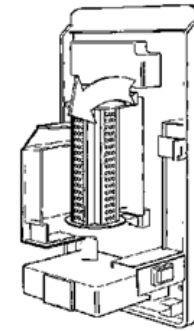

4. Replace the CIMR cell by reversing steps 2 and 3.

5. Return cover to unit and put the side screws (or optional torx security screws) into place.

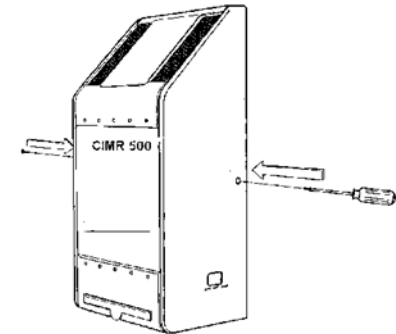


DISPOSAL OF USED CELL:

Please do not throw a used cell into the garbage. The special germicidal UVX bulb used in the cell contains a very small amount of mercury. You may return your used cell to Hi-Tech for proper disposal. Send the used cell to:

Hi-Tech Air Purification Systems
 105 Magnolia Lane
 Silsbee, TX 77656

Installation (cont.)


5. Return cover to unit and put the side screws (or optional torx security screws) into place.

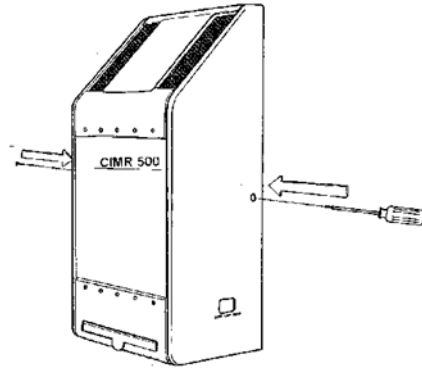


Removing/Reinstalling the Cell



Caution! – Disconnect power at the breaker or fuse panel before removing or installing the cell. Unit switch should be in OFF position.

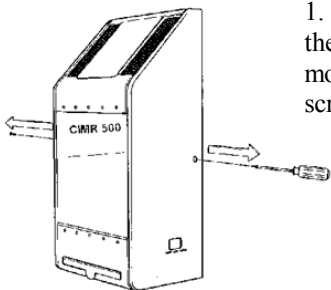

1. Remove the cover of the CIMR 500 by removing the 2 side screws.

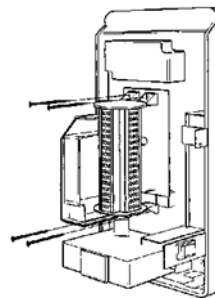

2. Remove the four (4) screws holding the cell in place.

Specifications:

Electrical:

- 120V ~, 60 Hz, 10.25 amp
- 22 watts power consumption

Size: Height:

- 12" (30 cm); Width: 6" (15.5 cm)
- Depth: 4" (10 cm)
- Weight: 2.9 pounds (1.3 kg)

Mechanical:

- One 3-setting control switch

Coverage:

- Up to 500 sq. ft. (46.5 sq. m)

Features:

- Low / OFF / High Switch
- Replacement CIMR Cell
- Two (2) Outlets

Warranty: Length of warranty will vary depending on model. See warranty card for specific details.

Principles of Operation:


The CIMR 500 system is designed to reduce odors through a patented CIMR process. When the unit is in operation, the CIMR Cell uses an Advanced Oxidation Process to reduce airborne contaminants. The CIMR Cell produces low levels of Hydrogen Peroxide that improves the air as it travels through the HVAC system.

Maintenance



CAUTION! Always unplug the unit before performing any maintenance procedures.

- Remove the filter from the bottom of the unit. Gently rinse filter with clean water. Allow the filter to dry completely before reinserting it back into the unit to avoid shock or shorting the unit.
- Carefully vacuum the grills.
- Wipe down case with a soft, damp cloth.
- Replace cell when the bulb no longer is lit, or every three years,

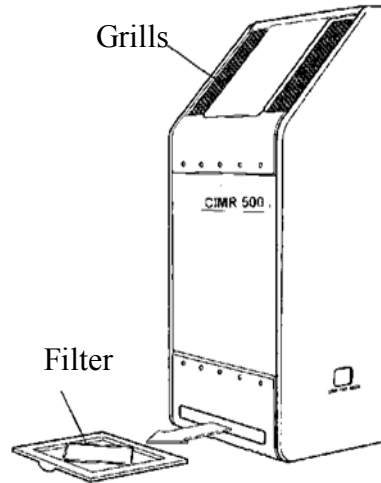


Installation




Caution! – Disconnect power at the breaker or fuse panel before installing unit. Unit switch should be in OFF position.


1. Locate an outlet with power clearances. It is not recommended to use a CFCI (Ground Fault Circuit Interrupter) equipped outlet.

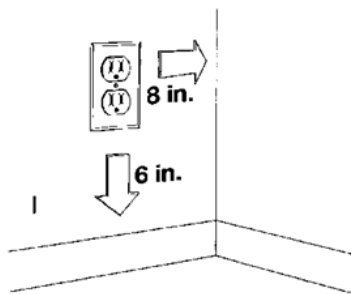

2. Remove the cover of the CIMR 500 by removing the 2 side screws. Remove cover from unit.

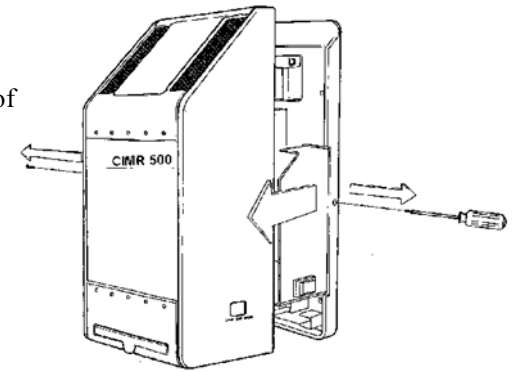


3. Remove the screw from outlet faceplate (Leave faceplate on outlet).

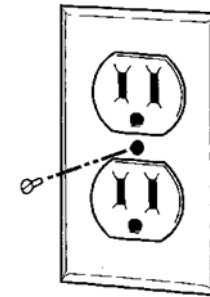

4. Insert CIMR 500 into outlet and secure with screw provided. Install CIMR cell.

(See pg 8)

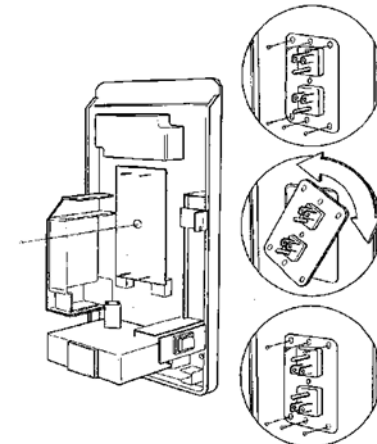

Installation instructions continued on page 8.